


B20/14 | B20/19 | B20/22 | B32/19 | B32/27

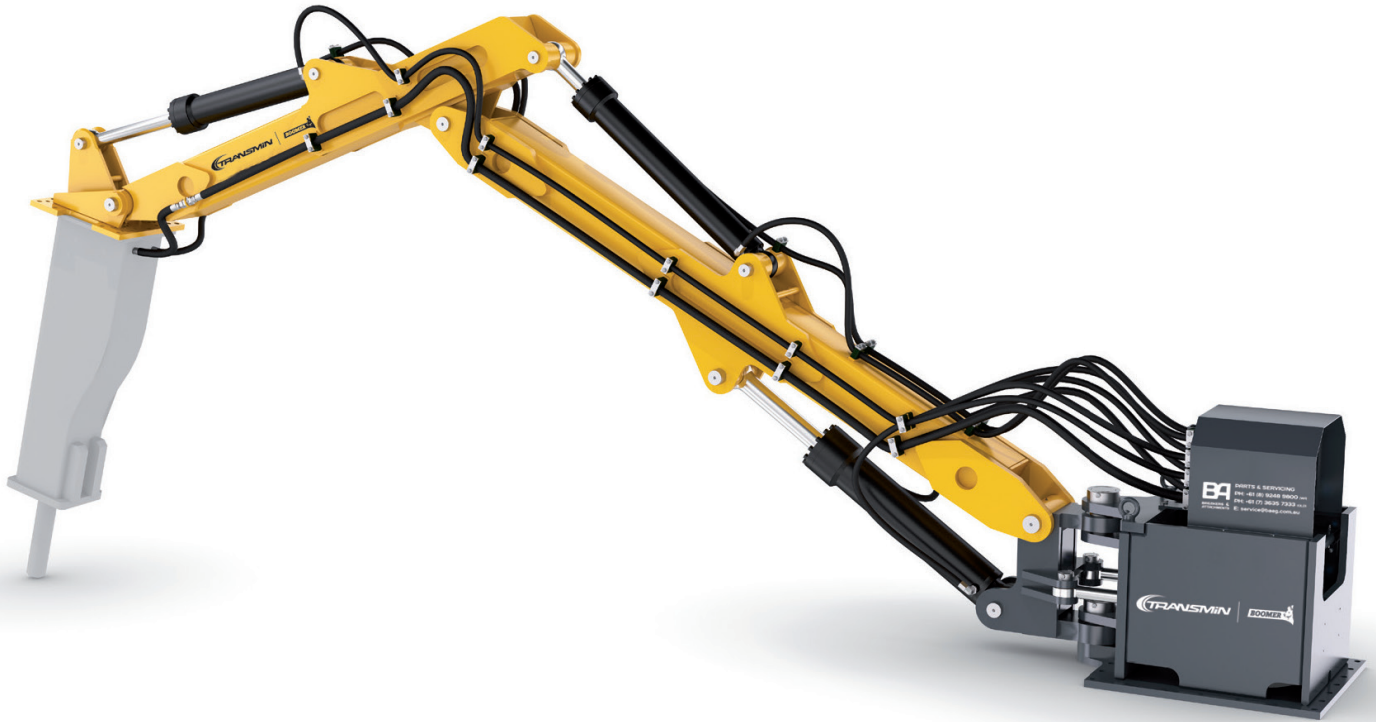


LIGHT TO MEDIUM DUTY JAW APPLICATIONS

MODELS	B20/14	B20/19	B20/22	B32/19	B32/27
Maximum reach (incl. nominal breaker), m	6.0	6.5	6.8	7.7	8.4
Horizontal reach, max (breaker vertical), m	3.9	4.3	4.6	5.6	6.2
Vertical reach, max (incl. nominal breaker), m	4.3	4.8	5.1	5.5	6.3
Nominal breaker length, m	2.0				
Swing	170				
Number of boom sections	2				
Operating mass, excluding breaker PowerPack and control console, kg	2500	2550	2600	2650	2750
Recommended breaker weight, kg	400-1000				
Foundation plate dimension, m	0.81 x 0.96				
Lift boom length, m	2.05	2.05	2.05	3.25	3.25
Dipper boom length, m	1.45	1.95	2.25	1.95	2.75
Dipper extension boom length, m	n/a				
Radial raking max, kg	n/a				
Axial raking max, kg	n/a				

B20/14 | B20/19 | B20/22 | B32/19 | B32/27

REACH CURVES

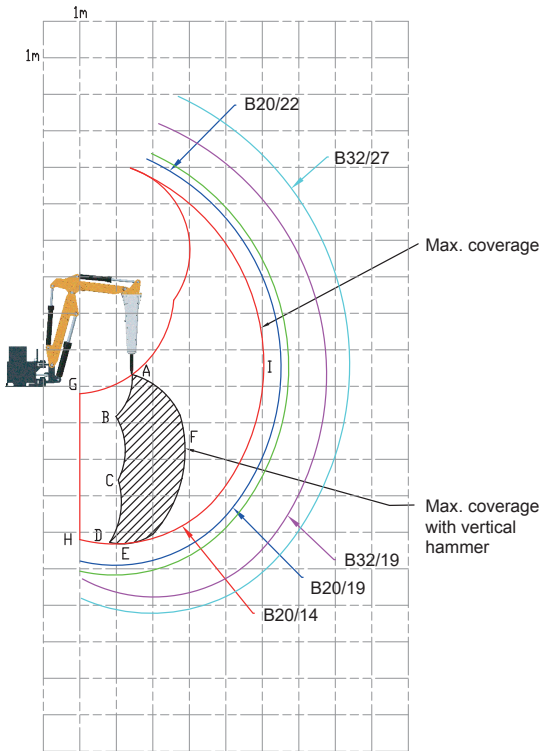

COORDINATES	B20/14	B20/19	B20/22	B32/19	B32/27
A	2.4 ; 0.3	2.9 ; 0.3	3.2 ; 0.2	3.3 ; 1.4	4.1 ; 1.3
B	2.0 ; -0.8	2.3 ; -1.3	2.4 ; -1.5	2.6 ; -0.1	3.0 ; -0.8
C	2.1 ; -2.6	1.8 ; -3.0	1.7 ; -3.3	2.0 ; -2.7	2.7 ; -3.4
D	1.8 ; -4.3	1.6 ; -4.7	1.5 ; -5.0	2.6 ; -5.4	2.3 ; -6.1
E	2.0 ; -4.3	2.0 ; -4.8	2.0 ; -5.1	2.0 ; -5.5	2.0 ; -6.3
F	3.9 ; -1.7	4.3 ; -2.1	4.6 ; -2.0	5.5 ; -1.9	6.3 ; -2.0
G	1.0 ; -0.2	1.0 ; -0.6	1.0 ; -0.8	1.0 ; 0.6	1.0 ; -0.1
H	1.0 ; -4.2	1.0 ; -4.7	1.0 ; -5.0	1.0 ; -5.0	1.0 ; -5.9
I	6.0 ; 0.7	6.5 ; 0.5	6.8 ; 0.6	7.7 ; 0.6	8.4 ; 0.6

Reach coordinates (x ; y) based on the typical breaker length.

BREAKER WEIGHT - POWERPACK REFERENCE (50Hz)	B20/14	B20/19	B20/22	B32/19	B32/27
300 - 599kg				BPP18	
600 - 1000kg				BPP30	

CONFIGURATION	B20/14	B20/19	B20/22	B32/19	B32/27
Hydraulic breaker			-		
Powerpack			o		
Control seat			+		
Control stand			-		
Radio remote control			o		
Autolube			+		
Hosetower			-		
Flexibase			-		
Hour meter breaker			-		
Cabin, protection glass			-		

• standard o option + accessory - not available
More about the boom accessories see separate brochure.

HEAD OFFICE

Western Australia

Local Call: 1300 127 091

International Call: +61 (0) 8 9270 8555

Email: wasales@transmin.com.au

Address: 33-37 Denninup Way Malaga
Perth, Western Australia, 6090

INTERNATIONAL OFFICES

South America Email: sales.sa@transmin.com.au

North America Email: sales.ca@transmin.com.au

India Email: sales.in@transmin.in

www.transmin.com.au



Western Australia:
breakerswa@baeg.com.au

Queensland & NT:
breakersqld@baeg.com.au